

5270 Edison Ave., Chino, CA 91710

(Tel) 800-790-1299 (Fax) 909-718-1949

NOTICE

Dear Customers:

Thank you for choosing our barbeque grill and hope that you enjoy our product.

Our gas valves and components are preset at the factory to operate on Liquid Propane (LP). If you wish to convert your grill from LP to Natural Gas (NG), we strongly recommend that you hire a professionally trained technician to convert the unit. Please understand that we will not be responsible for any liability, personal injury, or property damage resulting from an improperly converted grill.

We will provide warranty parts for this product after it is converted, however, we will not honor any warranty claims for parts damaged during the conversion of the original LP valves and orifices to NG configuration if the conversion is done improperly.

▲ WARNING! FALURE TO HEED THESE WARNINGS COULD RESULT IN A FIRE OR EXPLOSION THAT COULD CAUSE SERIOUS BODILY INJURY, DEATH OR PROPERTY DAMAGE.

Installation of this Natural Gas Conversion kit must be performed by a QUALIFIED GAS TECHNICIAN ONLY. DO NOT ATTEMPT TO INSTALL THIS KIT YOURSELF. Improper installation could result in a gas leak which could cause a fire or explosion and cause serious bodily injury, death or property damage. Leaks due to improper installation could occur immediately or slowly over time. If you hear any unusual noises or leaks, smell gas or unusual odors, or notice anything unusual with the operation of your gas appliance after the installation, immediately shut off the gas supply and discontinue use until the appliance is repaired by a QUALIFIED GAS TECHNICIAN.


If there are damaged or missing parts when you unpack this kit, call 1-800-790-1299. DO NOT have your QUALIFIED GAS TECHNICIAN attempt to install this kit until you receive replacement for any damaged or missing parts.

Orifice Chart

The different burner valves in this grill have different BTU ratings. This means that the amount of gas coming from each orifice varies in order to create the BTU's. The holes in the orifices themselves are drilled to different sizes so as to allow the proper amount of gas to flow through them. Please note the chart below to give an easy reference for the various orifice opening sizes for the different valves in the grill.

720/730-0586				
	LP		NG	
Components	Orifice Size	BTU	Orifice Size	BTU
Main Burner	1.06	13,000	1.83	13,000
Searing Main Burner	1.32	21,000	2.35	21,000
Rear Burner	0.94	10,000	1.55	10,000
Oven Burner	1.16	16,000	1.98	16,000

Tools required for converting from LP to NG, Below tools are not provide except 6mm Nut Driver& Allen Key.

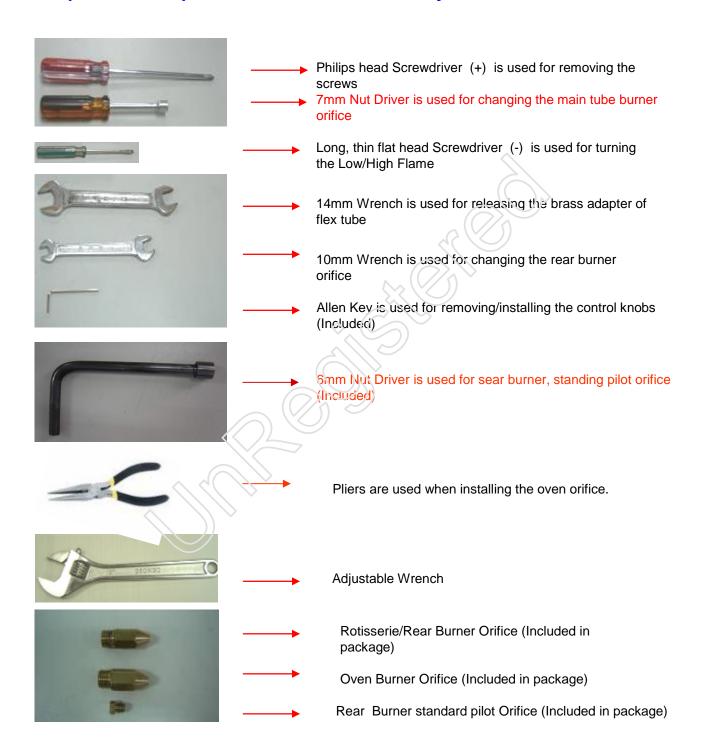

Warning: Make sure all grill components are completely cool and gas supply is turned off and removed from grill prior to performing the conversion.

NG Hose and Regulator Conversion

1: Install the regulator hose (short hose) to the end of the regulator marked "OUT". Install the brass connector to the other end of the regulator marked "IN". (If regulator, hose, and brass connector are preassembled, you may disregard this step.








2. Turn all knobs to OFF. Turn off LP gas supply and remove the LP cylinder from the grill cart. Remove the brass adapter of the LP regulator from the manifold with a wrench.






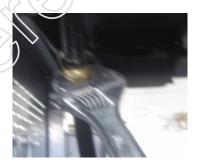

3. Tighten the NG regulator on the NG regulator bracket with two 5/32*10mm screws. Install the NG regulator hose to the manifold and secure using a wrench.





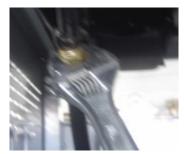

4. Screw the regulator bracket on the left side panel from outside to inside





Main Burner Conversion

Steps

- 1 Remove the rotisserie kit, warming rack, cooking-grids & flame tamers.
- 2. Remove the main burners from the firebox by loosening the screws securing the burners near the back wall of the firebox. Lift the burners up and out.







3. Locate the orifice at the end of valve and remove by turning counterclockwise with adjustable Nut Driver. Remove the LP orifice for each of the main tube burners (total 4).

The NG orifice is preassembled on the valve, behind the LP orifice.



4. Replace the question mark burners and screw back into original position.





Main Sear Burner Conversion

Step:

1. Unscrew and remove the bracket and counter pin located near the front wall of the firebox. Carefully remove the searing burner.





2. Locate the LP orifice (inside front wall of firebox) & use long nut driver to remove the orifice. Install the NG orifice and screw into place.







3. Replace & secure burners Fasten cotter pin and screw bracket back into place.



Rear Burner Conversion

In order to change a standing pilot from using LP gas to NG, the consumer will need to change the orifices of the **standing pilot** and the corresponding **burner**.

Steps:

1. Remove the screws securing the rear baffle and remove the rear baffle.






2. Remove the standing pilot cover located next to the burner.





3. The orifice is located behind the standing pilot tip. Remove the pilot tip by unscrewing the two screws that attach the pilot tip to the bracket. You will find the orifice is located behind the pilot tip.

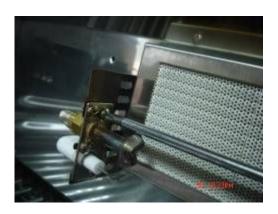



4. Unscrew the LP orifice from the standing pilot with a 6mm nut driver. Install the NG orifice and screw into place. Replace the pilot tip and screw back into place. Replace pilot cover to its original location and screw back into place.





5. From the back of the grill, unscrew the nut that secures the orifice connector to the retention bracket. Remove the rotisserie/rear burner orifice and remove with two wrenches from the connector—one wrench to hold the orifice connector in place and the other wrench to remove the LP orifice.





6. Install the NG orifice using the two wrenches. Replace the orifice connector to the retention bracket and secure by tightening the nut. Replace rear baffle and screw back into place.





Oven Burner Conversion

Steps

- 1. Remove Back Access Panel from the rear panel (Fig 1)
- 2. Grasp brass elbow with vice grip or pliers. With 10 mm wrench, remove LP orifice. (Fig 2,3))
- 3. Install NG orifice (1.98mm)
- 4. Insert orifices back into original position and secure. (Fig 4) Replace the access panel and secure with screws.





Fig 1 Fig 2

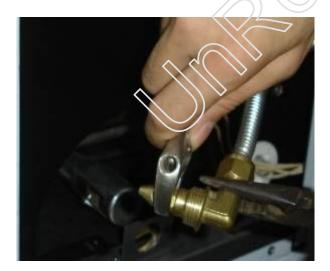




Fig 3 Fig 4

For Main Burner Conversion Only

(The 3 steps below are not necessary for the Sear Burner, Oven, and Rotisserie Burner)

You will need to adjust the High Flame setting screw when converting the barbecue from Propane to Natural Gas. Please follow the steps as detailed below.


- 1. Remove each Control Knob of main tube burners and side burner by loosening the socket head grub screw with the Allen Key.
- 2. Use a screwdriver to turn the High Flame Set Screw counterclockwise approximately 90 degree
- 3. Check that burner operates at the new high fire setting it may be necessary to adjust the screw setting slightly to get the ideal burner flame height.





Warning!! Gas Valves are preset at the factory to operate on LP gas or NG gas. If you wish to convert, be sure to consult your gas supplier or trained technician for the conversion.

- A. After the Natural Gas regulator has been installed, attach the PVC Gas hose to the regulator (See drawing below).
- B. Connect the other end of the PVC Gas Hose to the house gas line using the quick-connect fitting. To use the quick connect fitting, lift the head of the connector back. Insert the end of the PVC hose and release the head of the connector. Ensure connection is secure.

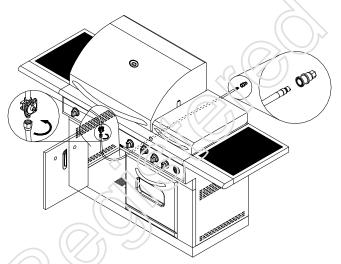

There is a brass adapter for natural gas lines that are pre-regulated. If the gas line is not pre-regulated, remove the brass adapter and connect the regulator directly to the PVC gas hose.



Brass connector for pre-regulated gas lines



PVC hose to NG regulator without brass connector

Once conversion is complete, please attach the NG CSA certification sticker to the grill.

If you should have any questions regarding natural gas conversion, please contact customer service at 1-800-790-1299.